Print on Plain White Paper (Part No. 122919)

Installation Instructions

Instrument Tray P/N (9A143001) for Podiatry Tables #414, 416, and 417

1. Position table with base fully extended and tilt inclined to 30°.

DANGER
Failure to disconnect the table's electrical supply cord could result in personal injury.

2. Disconnect the table's electrical supply cord to prevent electrical shock.

3. While facing the front of the table, locate the two mounting holes (1) in the upper portion of the plastic shroud (2).

4. Install mount weldment (3) securely onto the plastic shroud (2) using the two 3/8 inch bolts (4) supplied.

5. Insert support post (5) thru mount weldment (3) at mount weldment knob (6). Tighten mount weldment knob to secure.

6. Insert tray arm (7) onto the support post (5). Turn closest tray arm handle (8) to secure.

7. Place washer (9) onto tray post (10); then insert tray post in remaining hole on the tray arm (7). Tighten tray arm handle (11) to secure the tray assembly (12).

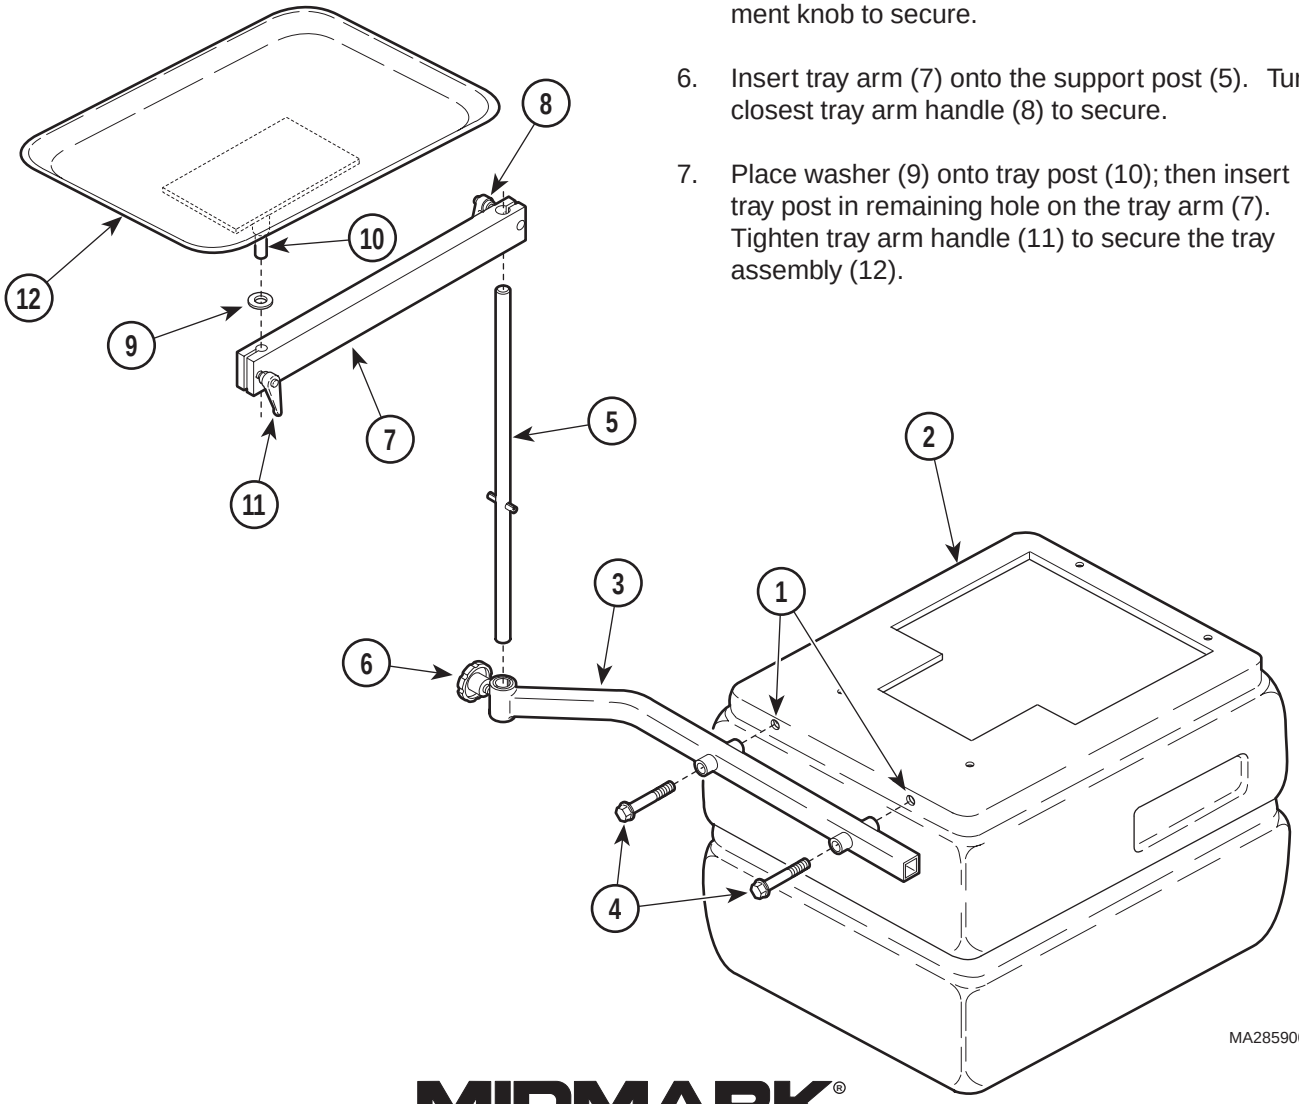

MA285900

MIDMARK®

Midmark Corporation, Versailles, Ohio 45380 U.S.A.
937-526-3662 TELEX 288007 FAX 937-526-5542

© Midmark Corporation 1995